HOME
DECORATORS
COLLECTION

BF-25174 MARTHA STEWART LIVING MUDROOM OPEN TOP STORAGE 19″Hx20″Wx16″D

INV#19144

ASSEMBLY INSTRUCTIONS

Made In China

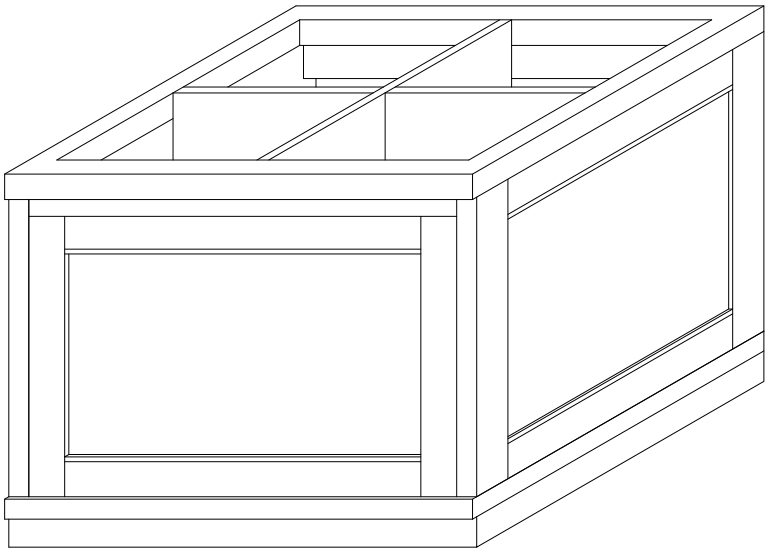

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B 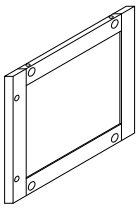 LEFT SIDE PANEL-1PC	C 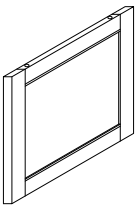 RIGHT SIDE PANEL-1PC
D 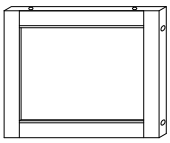 FRONT PANEL-1PC	E 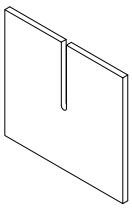 ACROSS PANEL-1PC	F  STAND PANEL-1PC
G 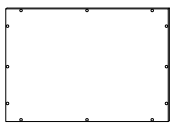 BACK PANEL-1PC	H ADORNING PANEL-1PC	I  BOTTOM PANEL-1PC
J 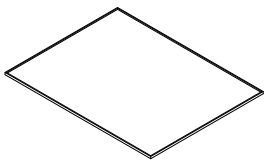 RUBBER TRAY-1PC	K  CAM-BOLTS-12PCS	L CAM-LOCKS-12PCS

M 7mm × 5/8"  SCREWS-12PCS	N 8mm × 1" 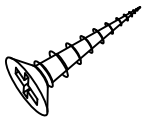 SCREWS-2PCS	O CAM-TOOL-1PC
P 6mm × 5/8"  SCREWS-8PCS	Q PLATES-2PCS	

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

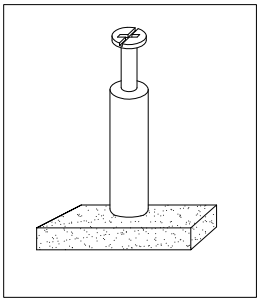

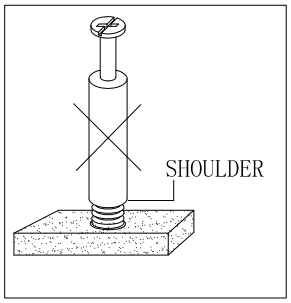

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

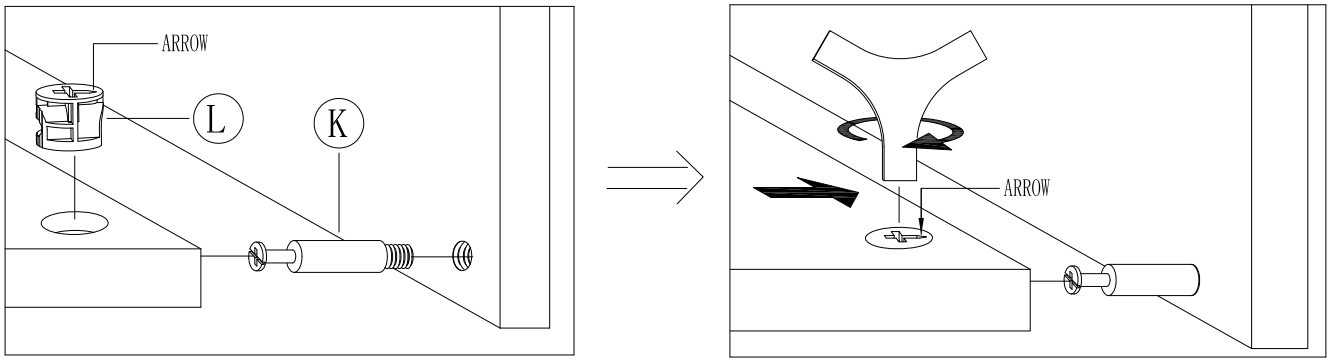

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

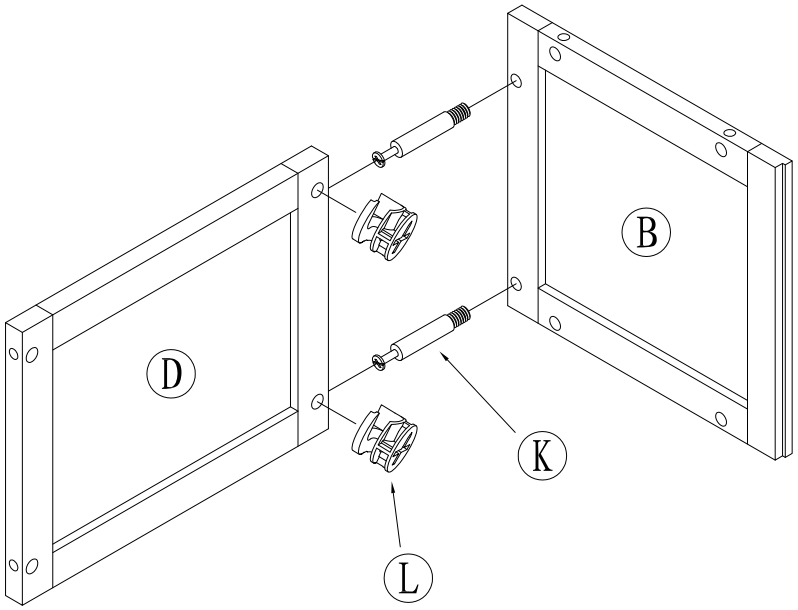

1). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 2 CAM-BOLTS(K) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE FRONT PANEL(D) AND ATTACH USING 2 CAM-LOCKS(L).

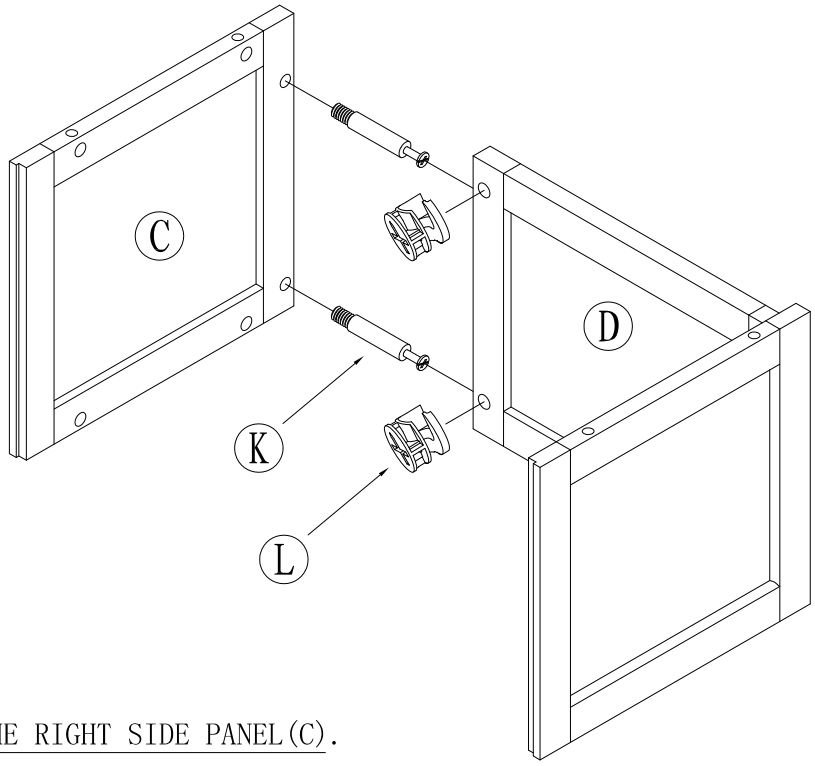

2). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(K) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE FRONT PANEL(D) AND ATTACH USING 2 CAM-LOCKS(L).

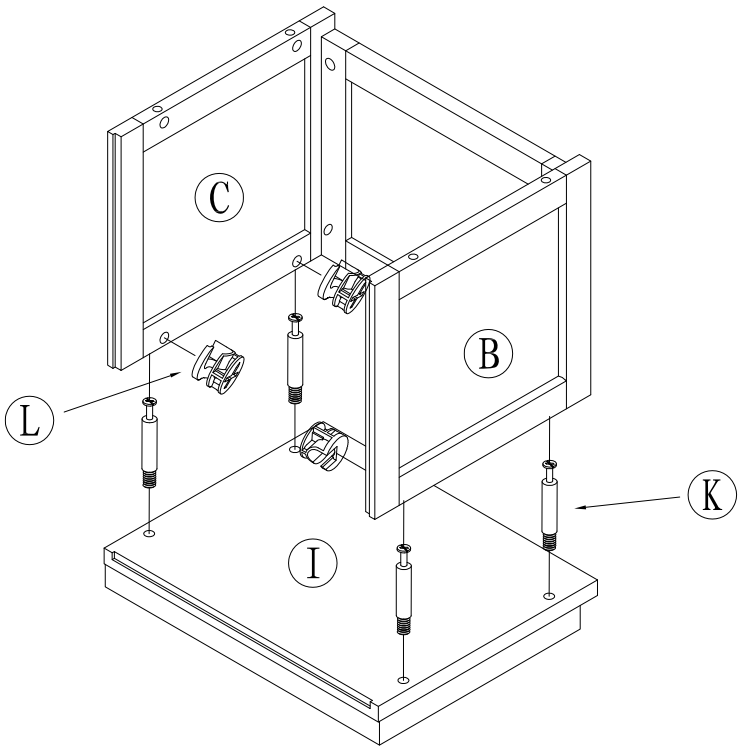

3). ASSEMBLE THE BOTTOM PANEL(I).

- ROTATE 4 CAM-BOLTS(K) INTO THE HOLES IN THE BOTTOM PANEL(I).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE SIDE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(L).

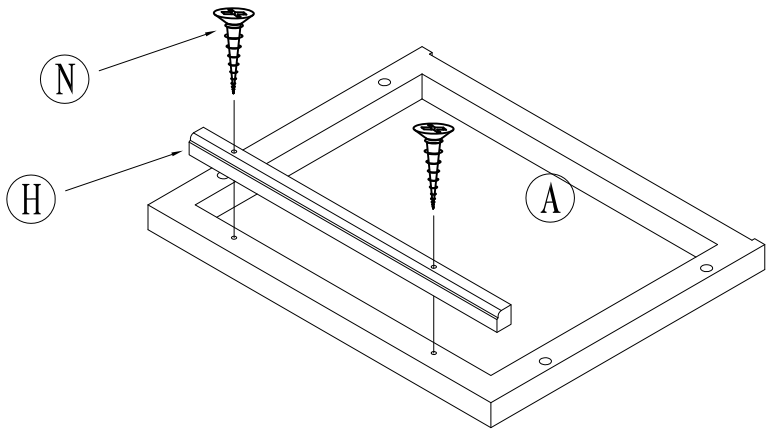

4). ASSEMBLE THE ADORNING PANEL(H).

- ATTACH THE ADORNING PANEL(H) TO TOP PANEL(A) USING 2 SCREWS(N).

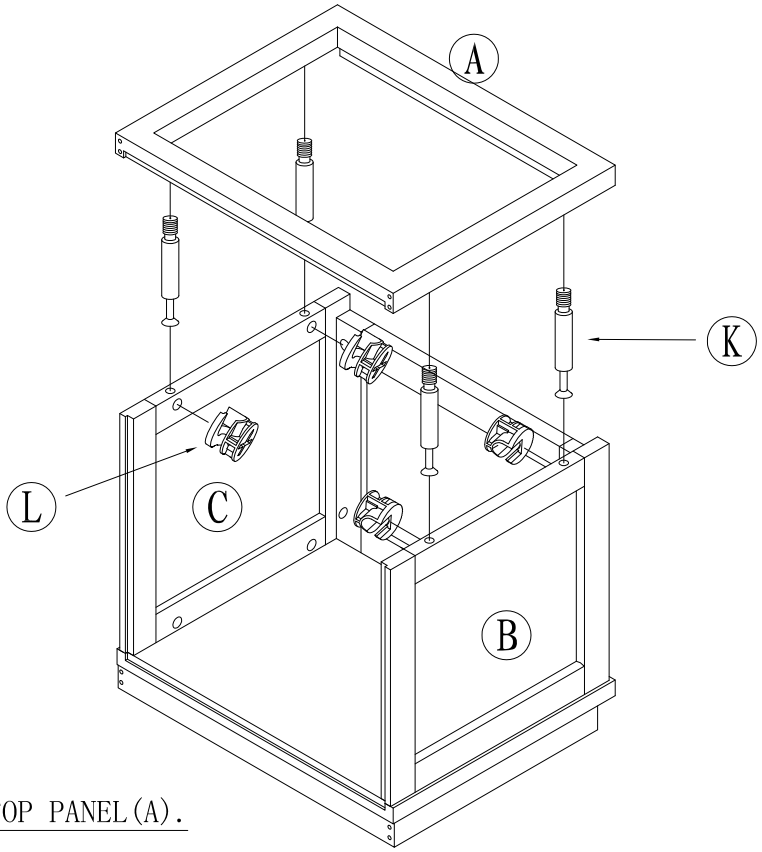

5). ASSEMBLE THE TOP PANEL(A).

- ROTATE 4 CAM-BOLTS(K) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(K) INTO THE HOLES IN THE SIDE PANEL(B/C) AND ATTACH USING 4 CAM-LOCKS(L).

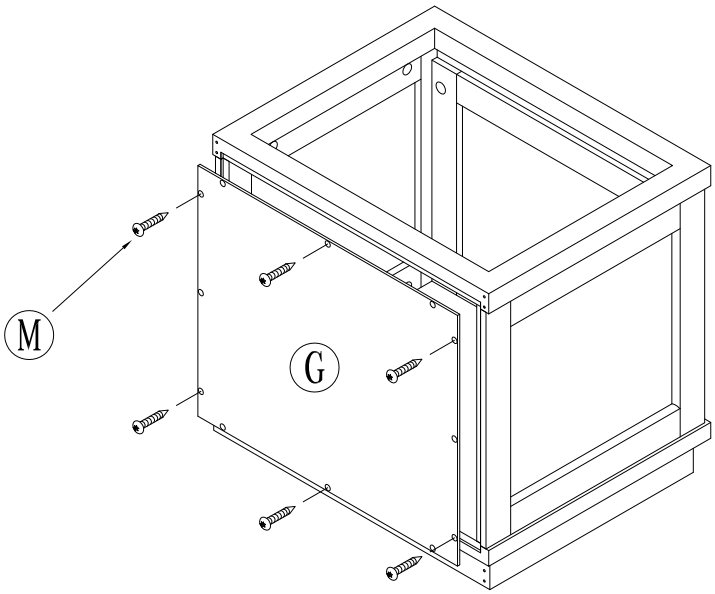

6). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G) USING 12 SCREWS(M).

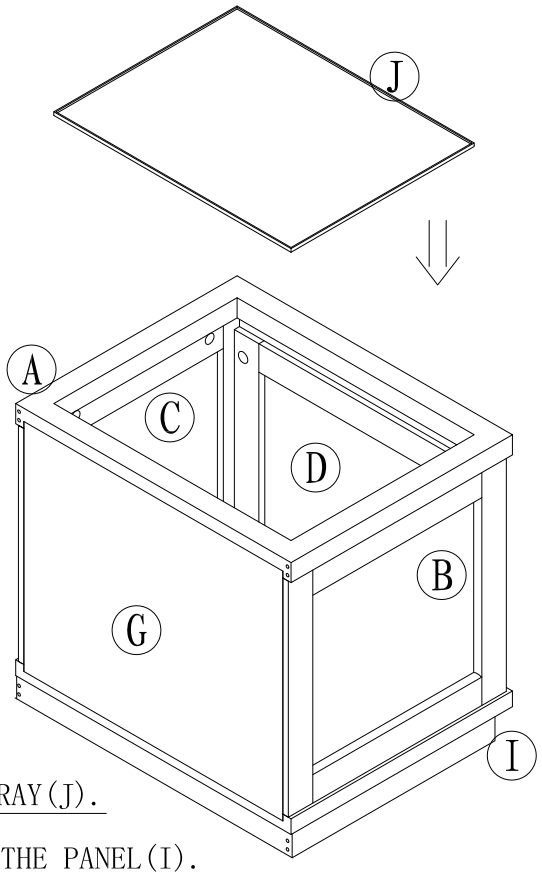

7). ASSEMBLE THE RUBBER TRAY(J).

- PUT THE RUBBER TRAY(J) ON THE PANEL(I).

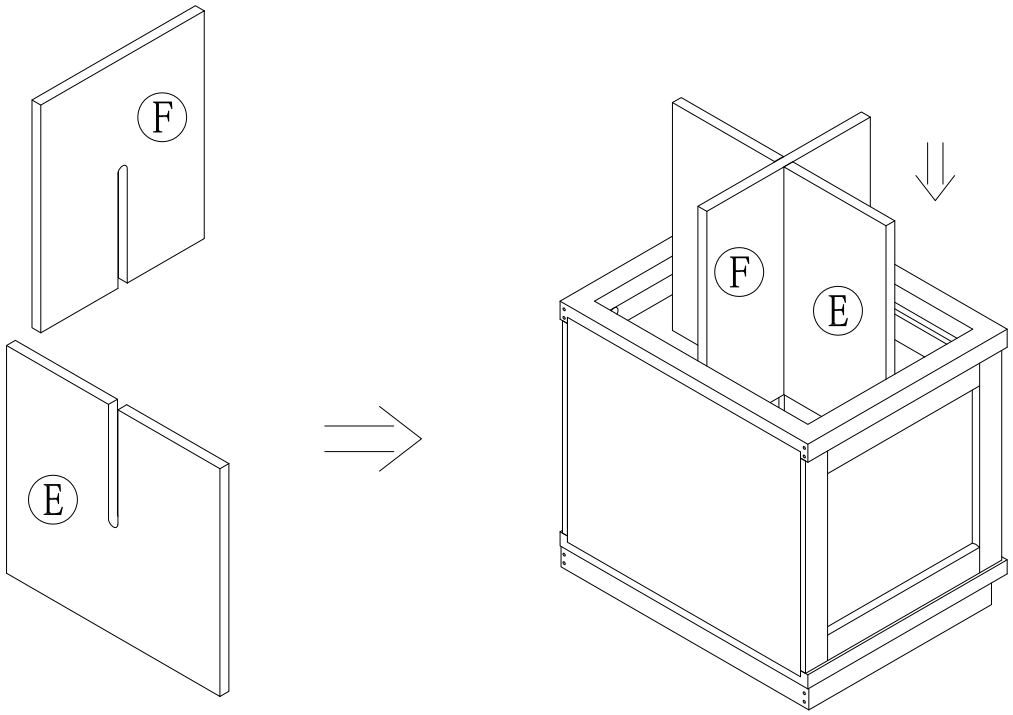

8). ASSEMBLE THE PANEL(E/F).

- INSERT THE STAND PANEL(F) INTO THE SLOTS IN THE ACROSS PANEL(E).
- PUT THE PANEL(E/F) ON THE PAD(J).